

SCOREBOARD OPERATION

for TOM BROWN ARENA

The scoreboard console in Tom Brown Arena is the OES ISC9000. Full manufacturer instructions can be found at <http://www.scoreboardsplus.com/about/wp-content/uploads/2012/08/ISC9000Manual.pdf>

 


GETTING STARTED

Reset console (if necessary)


Before each game, start by ensuring the console is off. You are ready to begin when the console shows this screen:

If it does not, reset the console by pressing and holding down the [OFF] key until the above screen appears.

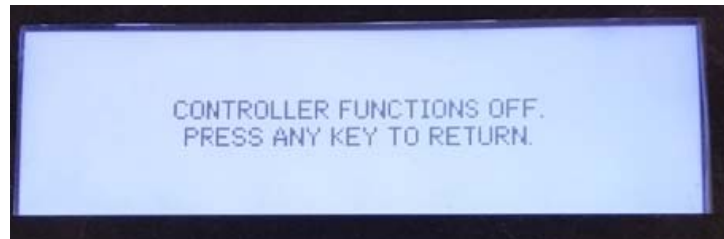

Start a New Game

 To start a new game, press the [CLEAR] key twice:

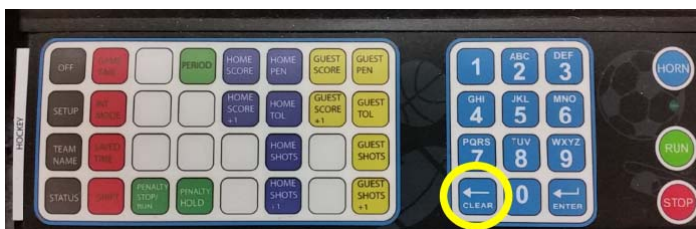

...once to "wake" the console:

 


.. and a second time to reset any previous configuration.

Set the Clock

To set the clock:

1. press [**GAME TIME**], which will allow you to edit the clock at any time, in the form **MM:SS:FF** (where MM=minutes, SS=seconds, and FF=fractions of a second in hundredths).
2. Enter **11** for number of minutes (games are 11 minutes long, with stoppages between whistles).
3. Press [**ENTER**].

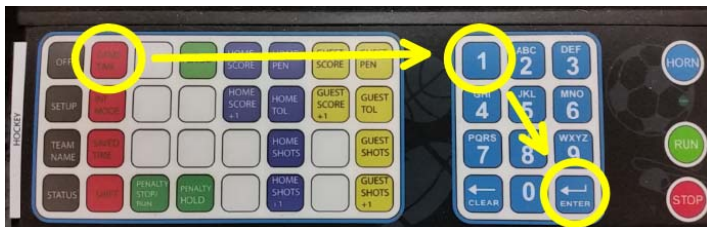

Your game is now ready to go, with 11 minutes remaining on the clock, in the first period, and 0-0 displayed for the score.

GAME PLAY

Timer

When the puck is dropped, press the [**RUN**] key to start the clock, and the [**STOP**] key when the referee blows the whistle to halt play.



Adding a Goal

Adding a goal is easy: simply press the "+1" key:

1. Home team (purple keys) goal: press [**HOME SCORE +1**]
2. Away team (yellow keys) goal: press [**GUEST SCORE +1**]

To Enter a Penalty

Use the [**HOME PEN**] or [**GUEST PEN**] buttons to add a penalty:



1. Press the appropriate penalty key: [**HOME PEN**] (purple) or [**GUEST PEN**] (yellow).
2. Enter the penalty time in minutes (most penalties are 2 minutes, unless noted by the referee).
3. Press [**ENTER**].

The penalty timer(s) will run automatically when the main clock is started again upon pressing the [**RUN**] key.

Multiple Penalties

If a team gets two or more penalties, to enter the next penalty:

1. Press the [**HOME PEN**] (purple) or [**GUEST PEN**] (yellow) button repeatedly. With each press, the cursor on the display will move down to the next slot in the penalty listings. For example, in the case of a second penalty to the Home team, press [**HOME PEN**] twice.
2. Enter the penalty time in minutes.
3. Press [**ENTER**].

You can enter up to 4 penalties. The scoreboard will only display one penalty a time, but as each one expires, the next one will be displayed on the scoreboard.

To Cancel a Penalty

If a penalty is annulled prior to the end of its natural run (i.e. the opponent scores):

1. Press the appropriate penalty key: [**HOME PEN**] (purple) or [**GUEST PEN**] (yellow). In the case of multiple penalties, press repeatedly until the display cursor appears on the line of the penalty you wish to cancel.
2. Press the [**CLEAR**] button.
3. Press [**ENTER**].

Set the Period



At the end of a period, increment the period number displayed prior to the start of the next period:

1. Press [**PERIOD**]
2. Enter the number of the upcoming period
3. Press [**ENTER**]

MAKING CHANGES

To Edit the Score

If you hit the +1 button one too many times, it's easy to fix:

1. Press [**HOME SCORE**] or [**GUEST SCORE**].
2. Use the numeric keypad to enter the score manually.
3. Press [**ENTER**].

To Edit the Time Remaining

If you need to reset the clock for any reason, simply:

1. Press [**GAME TIME**].
2. Enter the new game time using the numeric keypad, in minutes and seconds (and hundredths, if required).
3. Press [**ENTER**] at any point when the displayed time is correct.
4. Remember to press [**RUN**] when play resumes.